



BATTERY CHARGER

CHR-1445 / 2685



TEL : 886-4-2238-0698

FAX : 886-4-2238-0891

Web Site : <http://www.monicon.com.tw>

E-mail : sales@monicon.com.tw

Copyright © 2007 Monicon Instruments Co., Ltd. All right reserved. Contents in this publication may not be reproduced in any form without the expressed written permission of Monicon Instruments Co., Ltd

Important Safety Instruction



Warning

Warning:

1. SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for battery charger Model CHR-1445 / 2685.
2. Do not expose charger to rain or snow.
3. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
4. To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting charger.
5. An extension cord should not be used unless absolutely necessary, Use of improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure:
 - a) That pins on plug of extension cord are the same number, size, and shape as those of plug on charger;
 - b) That extension cord is properly wired and in good electrical condition; and
 - c) That wire size is large enough for ac ampere rating of charger as specified in Table 1.1

Table 1.1
Recommended minimum AWG size for extension cords for battery chargers

AC input rating, amperes ^a		AWG size of cord			
		Length of cord, feet (m)			
Equal to or greater than	But less than	25	50	100	150
		(7.6)	(15.2)	(30.5)	(45.6)
0	2	18	18	18	16
2	3	18	18	16	14
3	4	18	18	16	14
4	5	18	18	14	12
5	6	18	16	14	12
6	8	18	16	12	10
8	10	18	14	12	10
10	12	16	14	10	8
12	14	16	12	10	8
14	16	16	12	10	8
16	18	14	12	8	8
18	20	14	12	8	6

^a If the input rating of a charger is given in watts rather than in amperes, the corresponding ampere rating is to be determined by dividing the wattage rating by the voltage rating – for example:

$$1250 \text{ watts} / 125 \text{ volts} = 10 \text{ amperes}$$



6. Do not operate charger with damaged cord or plug – replace the cord or plug immediately.
7. Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceman.
8. Do not disassemble charger; take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
9. To reduce risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
10. **WARNING – RISK OF EXPLOSIVE GASES.**
 - a) **WORKING IN VICINITY OF A LEAD-ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL BATTERY OPERATION. FOR THIS REASON, IT IS OF UTMOST IMPORTANCE THAT YOU FOLLOW THE INSTRUCTINOS EACH TIME YOU USE THE CHARGER.**
 - b) To reduce risk of battery explosion, follow these instructions and those published by battery manufacturer and manufacturer of any equipment you intend to use in vicinity of battery. Review cautionary marking on these products and on engine.
11. **PERSONAL PRECAUTIONS**
 - a) Consider having someone close enough by to come to your aid when you work near a lead-acid battery.
 - b) Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
 - c) Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.
 - d) If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.
 - e) NEVER smoke or allow a spark or flame in vicinity of battery or engine.
 - f) Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
 - g) Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, causing a severe burn.
 - h) Use charger for charging a LEAD-ACID battery only. It is not intended to supply power to a low voltage electrical system other than in a starter-motor application. Do not use battery charger to charging dry-cell batteries that are



commonly used with home appliances. These batteries may burst and cause injury to persons and damage to property.

- i) NEVER charge a frozen battery.

12. PREPARING TO CHARGE

- a) If necessary to remove battery from vehicle to charge, always remove grounded terminal from battery first. Make sure all necessities in the vehicle are off, so as not to cause an arc.
- b) Be sure area around battery is well ventilated while battery is being charged.
- c) Clean battery terminals. Be careful to keep corrosion from coming in contact with eyes.
- d) Add distilled water in each cell until battery acid reaches level specified by battery manufacturer. Do not overfill. For a battery without removable cell caps, such as valve regulated lead acid batteries, carefully follow manufacturer's recharging instructions.
- e) Study all battery manufacturer's specific precautions while charging and recommended rates of charge.
- f) Determine voltage of battery by referring to car owner's manual and make sure that output voltage selector switch is set at correct voltage. If charger has adjustable charge rate, charge battery initially at lowest rate.

13. CHARGER LOCATION

- a) Locate charger as far away from battery as dc cables permit.
- b) Never place charger directly above battery being charged; gases from battery will corrode and damage charger.
- c) Never allow battery acid to drip on charger when reading electrolyte specific gravity or filling battery.
- d) Do not operate charger in a closed-in area or restrict ventilation in any way.
- e) Do not set a battery on top of charger.

14. DC CONNECTION PRECAUTIONS

- a) Connect and disconnect dc output clips only after setting any charger switches to "off" position and removing ac cord from electric outlet. Never allow clips to touch each other.
- b) Attach clips to battery and chassis as indicated in 15(e), 15(f), and 16(b) through 16(d).

15. FOLLOW THESE STEPS WHEN BATTERY IS INSTALLED IN VEHICLE. A SPARK NEAR BATTERY MAY CAUSE BATTERY EXPLOSION. TO REDUCE RISK OF A SPARK NEAR BATTERY:

- a) Position ac and dc cords to reduce risk of damage by hood, door, or moving engine part.



- b) Stay clear of fan blades, belts, pulleys, and other parts that can cause injury to persons.
- c) Check polarity of battery posts. POSITIVE (POS, P, +) battery post usually has larger diameter than NEGATIVE (NEG, N,-) post.
- d) Determine which post of battery is grounded (connected) to the chassis. If negative post is grounded to chassis (as in most vehicles), see (e). If positive post is grounded to the chassis, see (f).
- e) For negative-grounded vehicle, connect POSITIVE (RED) clip from battery charger to POSITIVE (POS, P, +) ungrounded post of battery. Connect NEGATIVE (black) CLIP to vehicle chassis or engine block away from battery. Do not connect clip to carburetor, fuel lines, or sheet-metal body parts. Connect to a heavy gage metal part of the frame or engine block.
- f) For positive-grounded vehicle, connect NEGATIVE (BLACK) clip from battery charger to NEGATIVE (NEG, N, -) ungrounded post of battery. Connect POSITIVE (RED) clip to vehicle chassis or engine block away from battery. Do not connect clip to carburetor, fuel lines, or sheet-metal body parts. Connect to a heavy gage metal part or the frame or engine block.
- g) When disconnecting charger, turn switches to off, disconnect AC cord, remove clip from vehicle chassis, and then remove clip from battery terminal.
- h) See operating instructions for length of charge information.

16. FOLLOW THESE STEPS WHEN BATTERY IS OUTSIDE VEHICLE. A SPARK NEAR THE BATTERY MAY CAUSE BATTERY EXPLOSION. TO REDUCE RISK OF A SPARK NEAR BATTERY:

- a) Check polarity of battery posts. POSITIVE (POS, P, +) battery post usually has a larger diameter than NEGATIVE (NEG, N, -) post.
- b) Attach at least a 24-inch-long 6-gauge (AWG) insulated battery cable to NEGATIVE (NEG, N, -) battery post.
- c) Connect POSITIVE (RED) charger clip to POSITIVE (POS, P, +) post of battery.
- d) Position yourself and free end of cable as far away from battery as possible – then connect NEGATIVE (BLACK) charger clip to free end of cable.
- e) Do not face battery when making final connection.
- f) When disconnecting charger, always do so in reverse sequence of connecting procedure and break first connection while as far away from battery as practical.
- g) A marine (boat) battery must be removed and charged on shore. To charge it on board requires equipment specially designed for marine use.



Table of Content

1. Descriptions.....	7
2. Features	7
3. Specifications	7
4. Installation and Operation.....	8
5. Notes:.....	8
6. Label Specification	8
7. Dimensions	9



1. Descriptions

Intelligence module keeps lead acid battery at full charging all the time. Short-circuit, over load, and over voltage protection prevent any damage to the battery. Wide AC input voltage and DC output voltage gives the high flexibility of usage. Charger also in accordance with the principle of high Efficiency, at Full Load >85% of efficiency is achieved. Easy operation reduces the time and cost for client training.

2. Features

- Short circuit protection, overload protection, force charge input
- Float charging system, constant voltage output, current limited
- Rugged design for industrial environments, wide range of input voltage

3. Specifications

AC Input Voltage:

Voltage 90~250VAC

Frequency 50/60Hz

DC output voltage:

13.6 ~ VDC

24.4 ~ 27VDC

Charging algorithm:

Constant voltage

Protection:

Over voltage, Over current, DC short circuit

Efficiency:

at Full Loaded >85%

Working Temperature:

-40 ~ 40°C

Storage Temperature:

-40 ~ 70°C

Relative humidity:

Max. 90 %

Dimension:

147mmL*82mmW*43mmH

Weight:

482.2g


4. Installation and Operation

- 1.1 Turn off the AC power before connecting to L and N terminals.
- 1.2 Connect + and – terminals on the charger to + and – terminals of the battery then turn ON the AC power.
- 1.3 The design of automatic charging circuit limits the output, when the battery is fully charged.
- 1.4 Built-in short circuit protection.

5. Notes:

- 5.1. All the adjustments are preset at factory.
- 5.2. When charging, lead-acid battery produces gas, please install it in a well ventilated area.
- 5.3. Avoiding contact with rain, sun, or corrosive gas.
- 5.4. Battery voltage must be over 6V.
- 5.5. Charger only for lead acid battery.

6. Label Specification

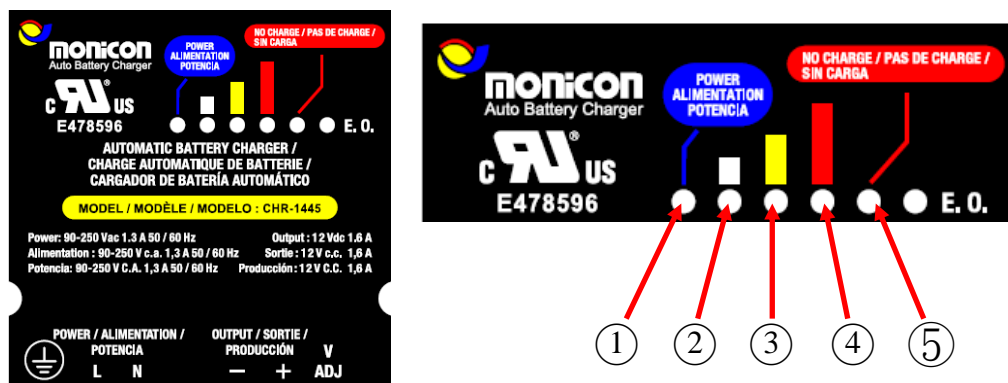

1. **AC Power indicator:** When ac power is connected, this light turns on.
2. **Low output current:** When the battery is close to fully charged, only this LED remains.
3. **Moderate flow of current:** When current output is near 50%, the LED turns on.
4. **Charging at full load:** When LED light is on, the charger is operating above 50% capacity.
5. **When the red light is on:** Please check the following status,
 - I. Has the battery voltage dropped below standard safety value (happens in old battery, dead battery, battery hasn't been serviced etc.)
 - II. Input & output has been improperly connected.
 - III. Ensure charger's output voltage meets the battery voltage.

7. Dimension

